


# MobileQ

## Android OS version

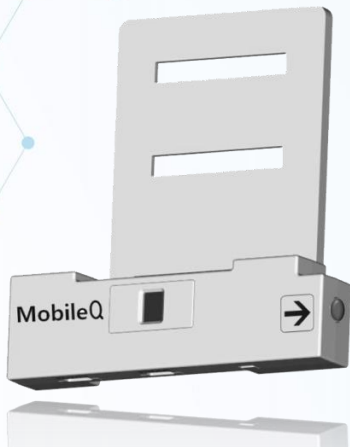

MobileQ is a Corona prevention access check device that combines the smart devices (smartphone & tab) owned by customer and the optimal solution provided by CrasID


- Face mask Check
- Fever Check
- Visitor Identification
- Visit\_Log Record

**MobileQ is not a medical device, it should be used for screening purposes, and accurate body temperature measurement should be performed with a thermometer certified by the Ministry of Food and Drug Safety.**


**The storage of photos and QR codes must comply with the Personal Information Protection Act.**

## Components

### • MobileQ

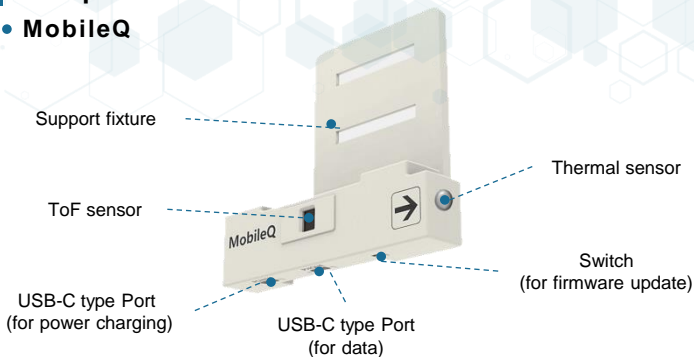

### • Accessory (Complimentary items)

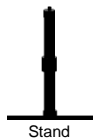

- ※ Accessory (Complimentary items) may be changed without prior notice in order to improve product quality.
- ※ Strongly recommend to use the provided USB cables (power & phone) and USB gender (C-B Type) can never be replaced with other manufacturer's genders.

## Reference site


- [MobileQ App Download Guideline](#)
- [MobileQ Assembly \(video and document\)](#)
- [MobileQ User Manual](#)
- Other MobileQ related Information



Scan the QR code, or Please link to "<http://crasid.com/e/mobileq.html>"


## MobileQ App Download & Assembly

- Download the “MobileQ” App from the Google Play Store to your smart device.  
(Disconnect WiFi after download)
- Select the options for your usage at the “Settings Menu” display of MobileQ App.  
(Refer to “Settings Menu” in the User Manual.)

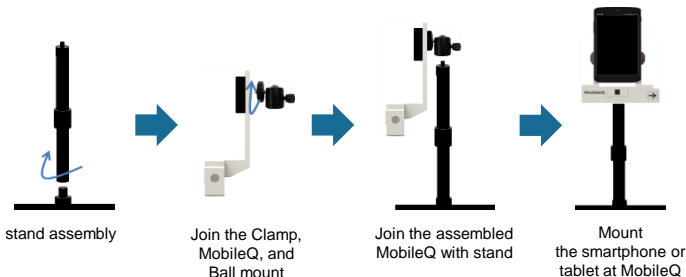

**※ Please refer the “MobileQ Assembly” video & document before assembly.**

## Installation Guide

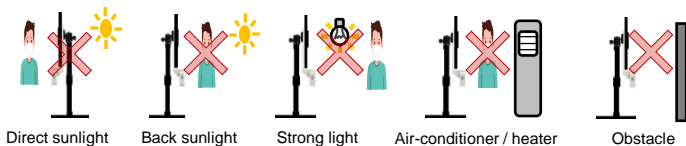

- Do not install near direct sunlight, backlight, or strong indoor light sources.
- Do not install near air-conditioner or heater
- No obstacles within 1 meter from the front of the MobileQ.

## Cautions

- Assemble the product according to the assembly sequence in the product manual.
- When assembling the product, do not use excessive force, and be sure to wear protective gloves when assembling.
- After connecting the power and data cables, run the MobileQ app.

- After 2 to 3 minutes of installation, you can check wearing a mask and check your body temperature. (However, for normal use, please use after 15 minutes of stabilization time after power is applied.
- Always keep the ToF sensor and thermal sensor clean so that there are no foreign substances.
- Be careful that the ToF sensor and thermal sensor are not covered by obstacles (stickers, memo papers, tapes, etc.).
- Be careful as it may fall over due to external impact.
- Be careful of short circuit or electric shock when using in a humid place.
- Since it is a non-contact checker, do not touch the ToF sensor and thermal sensor carelessly.

## Product Warranty

<b>Product name</b>	MobileQ	<b>Model</b>	MQ-01
<b>Date of purchase</b>		<b>Warranty Period</b>	One year
<b>Store name</b>		<b>Dealer Contact</b>	

1. This product is manufactured through the manufacturer's strict quality control and inspection process.
2. Product exchange, refund, and free repair may be subject to action in accordance with the Consumer Damage Compensation Regulations.
3. In the following cases, the service is provided at actual expenses.
  - 1) Even during the warranty period, if the malfunction is caused by the customer's negligence
  - 2) Damages due to natural disaster (fire, flood, earthquake, etc.)
  - 3) Any damages due to the disassembling or remodeling the product by unauthorized user
  - 4) The product warranty is lost (Warranty cannot be reissued.)

**CRASID Co., LTD**

